

INSTALLING THE FURNITURE DOOR

You will need to install a furniture door frame to the front of the wine cabinet once the wine cabinet has been installed.

The furniture door frame can be custom-made to line up with your other furniture doors in the kitchen. The door must be finished on both sides in order to prevent warping. In some installations the door panel may be visible through the glass when the door is open. See below for wine cabinet door dimensions, and an example of a furniture door size.


Note: The door panel must not weigh more than 15kg DVN-32.85DOP.TO.

Note: The door panel must not weigh more than 10kg DVN-109.291DOP.TO.

Note: The door thickness must not exceed 22mm. If a thicker door is used, the door may make contact the adjacent furniture door when opened.

DVN-32.85DOP.TO

Panel ready door dimensions below. This is the original door as it is delivered. This is NOT the indicated panel size.

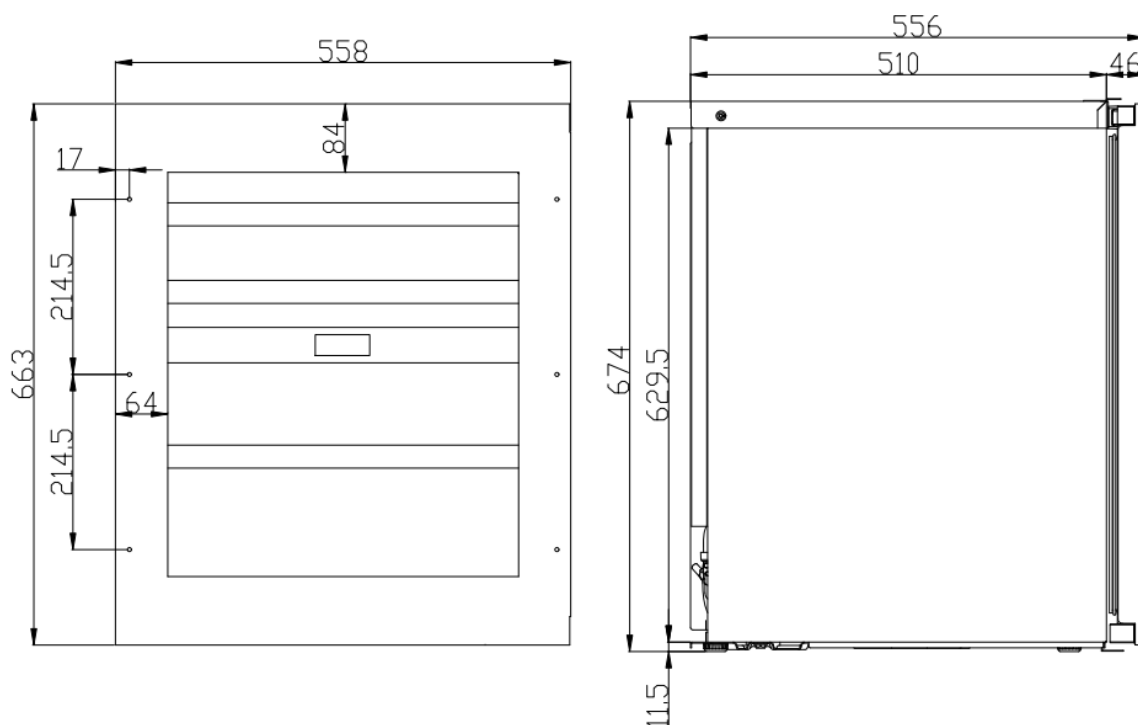

DVN-109.291DOP.TO

Panel ready door dimensions below. This is the original door as it is delivered. This is NOT the indicated panel size.

